

SIG SAUER - SIG MPX SINGLE STAGE STRAIGHT TRIGGER ****4.5lb****

[Rifle Parts](#) > [Triggers Parts](#) > [Triggers](#)

Unlock the full potential of your SIG SAUER MPX with the Timney Trigger. The Timney 683 AR Trigger for SIG MPX (Single Stage) is the ideal upgrade for shooters who demand the highest levels of precision, consistency, and reliability. Specifically engineered for the AR platform, this single-stage trigger delivers a clean, precise, and repeatable break, ensuring an exceptional shooting experience with every shot.

Manufactured from high-quality materials, the Timney 683 stands out for its superior craftsmanship and precise construction. The smooth, light trigger pull minimizes unwanted disturbance during firing and provides consistent trigger characteristics, allowing for greater accuracy and control. The single-stage design offers a direct, uniform trigger pull with no take-up, reducing reaction time and enhancing precision.

Designed to fit seamlessly into the SIG MPX system, the trigger is produced to tight tolerances and installs easily without the need for special tools or modifications. Built for durability, the Timney 683 is engineered to withstand intensive use while maintaining long-term reliability and performance.

Combining technical excellence with user-friendly installation and outstanding value, this trigger is the perfect upgrade for shooters looking to enhance their SIG SAUER MPX with a precise and dependable trigger system.

Technical Specifications:

Model Compatibility: SIG SAUER MPX

Trigger Type: Single Stage

Trigger Shoe: Straight

NO IMAGE
AVAILABLE

Attributes

- Name: [SIG MPX SINGLE STAGE STRAIGHT TRIGGER ****4.5lb****](#)
- Manufacturer: [TIMNEY](#)
- Product no.: EU2016672
- Mfr. No.: 683
- Delivery weight: 0.1kg
- Shipping height: 34mm
- Shipping width: 89mm
- Shipping length: 191mm
- UPC: 081950683000

Table of Contents

- [Startpage](#)
- [SIG SAUER SIG MPX SINGLE STAGE STRAIGHT TRIGGER Safety Instructions](#)
- [About Us](#)

SIG SAUER SIG MPX SINGLE STAGE STRAIGHT TRIGGER Safety Instructions

Introduction

Thank you for choosing the SIG SAUER SIG MPX Single Stage Straight Trigger. This product is designed to enhance your shooting experience by providing a precise and reliable trigger system. It is important to read and understand these safety instructions to ensure safe and effective use of the trigger.

General Safety Guidelines

- Always treat every firearm as if it is loaded.
- Keep the firearm pointed in a safe direction at all times.
- Ensure that the trigger is installed correctly and securely before use.
- Regularly inspect the trigger and firearm for any signs of wear or damage.
- Store the firearm and trigger in a secure location, out of reach of children and unauthorized users.
- Follow all local laws and regulations regarding firearm use and modifications.
- Use appropriate protective equipment, such as eye and ear protection, when shooting.

Specific Safety Precautions for Use

- Do not use the trigger if it appears damaged or malfunctioning.
- Ensure that the firearm is unloaded before installing or adjusting the trigger.
- Avoid using the trigger in adverse weather conditions, such as rain or snow, which may affect performance.
- Be aware of your surroundings and ensure that the shooting area is clear of people and obstacles.
- Use only compatible ammunition as specified by the firearm manufacturer.
- Do not modify the trigger or firearm in any way that is not recommended by the manufacturer.

Instructions for Installation and Usage

Installation

1. **Preparation:** Ensure the firearm is unloaded and pointed in a safe direction.
2. **Remove the Existing Trigger:** Follow the manufacturer's instructions to safely remove the existing trigger.
3. **Install the Timney 683 Trigger:**
 - Align the trigger with the trigger housing.
 - Insert the trigger pin and ensure it is seated securely.
 - Doublecheck that the trigger is properly installed and functions smoothly.
4. **Final Inspection:** After installation, perform a function check to ensure the trigger operates correctly.

Usage

- Familiarize yourself with the trigger's operation before using it in a livefire situation.
- Practice safe handling and shooting techniques at all times.
- Regularly maintain the trigger and firearm as per the manufacturer's guidelines to ensure optimal performance.

Disposal Instructions

- Dispose of the trigger and any associated components in accordance with local regulations regarding hazardous materials.

- If the trigger is no longer functional, consider recycling it through a proper electronic waste disposal program.

Contact Information for Further Support

For any questions or concerns regarding the SIG SAUER SIG MPX Single Stage Straight Trigger, please refer to the manufacturer's website or customer support resources for assistance.

By following these safety instructions, you can ensure a safe and enjoyable shooting experience with your SIG SAUER MPX Single Stage Straight Trigger. Always prioritize safety and responsibility when handling firearms.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk